




2. Fixed the glass panel with wall profile on the wall. Connect two rails on the top to keep level.

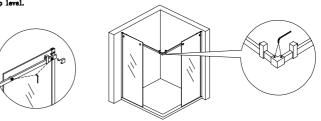


3: As shown, fixed anti-water strip on the base



4: Fixed the moving door with wheels on the top rail.

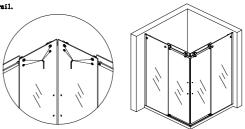

 $\delta_1$  Put the F-rubber on the fixed panel and 90  $^{\circ}$  magnetic stripe insert the door and fix the handles.

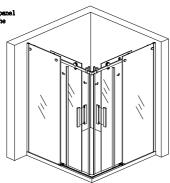

6. Apply silicons seelend to all joints between fixed glass panel, wall profile and enti-water strip on the base. Don't use the enclosure for 24 hours, to allow the slicons to dry completely.

